

# FORM FIT Side Window Visors


## Installation Instructions

SD 22P20  
Kia Seltos (2020 - 2026)

### Notes to the Installer:

- Make sure the vehicle is clean and completely dry before installation. Be aware any debris, oils, paint or surface treatment can effect the pedestal adhesiveness to the vehicle surface.
- Make sure the vehicle is at room temperature or warmer: 15° to 43°C (60° to 110°F) before starting installation and that it remains at room temperature for 1 hour afterward to develop maximum adhesion of the 3M tape to the vehicle's surface. Failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.

### Kit Contents

1		2		3		4		5		6		7	
8		9		10									
<b>#</b> <b>Qty</b> <b>Description</b>													
1	1	Side window visors (set of 4)											
2	8	Plastic visor clips											
3	2	Surface cleaner pad											
4	2	Microfibre towel											
5	2	3M Primer 94 Ampule											
6	4	Adhesive pedestals											
7	4	Screws											
8	4	Pins											
9	1	Wet out stick											
10	1	Gasket											

### #5 - 3M Primer 94 Instructions


- Squeeze tube in middle to break inner ampule.
- Apply to clean, dry surface.
- Allow at least 5 minutes to dry before taping.
- Clean up any excess with the surface cleaner.

### Care instructions


- Do not pull or push on the window visors when opening or closing the vehicle's doors.
- Regularly maintain and inspect the visors. Confirm the visors are securely attached to the vehicle.
- Check for missing hardware or detached tape. Missing components may lead to product failure.
- Hand clean visors using a mild soap and water solution or plastic cleaner only.
- Do not use glass cleaner (Windex) to clean window visors or other plastic parts.

This product uses 3M's highest quality two-sided tape. Please allow the tape to properly bond to your vehicle before washing the vehicle or driving at high speed. Allow 24 hours before washing or driving over 100 kmh.


## Driver's Side

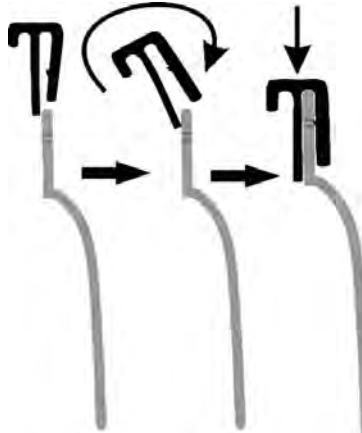


1 Using the method illustrated, snap two (2) clips on each visor. Note orientation of the clip.

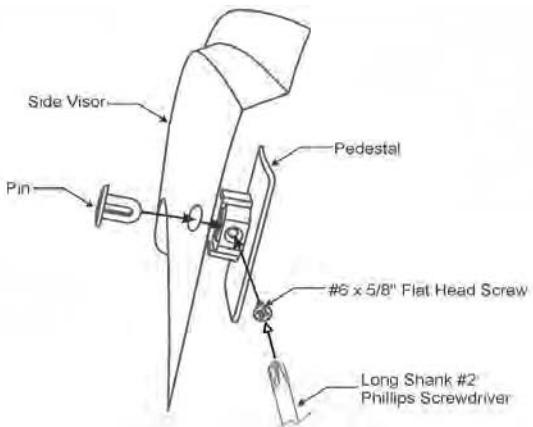


2 Insert a pin through the hole in the side visor and into the adhesive backed pedestal. Maintain slight pressure on the pin, to ensure proper seating of the components, while simultaneously tightening the screw.

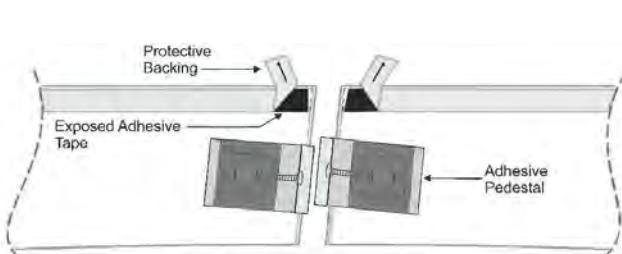


3 See illustration for pedestal orientation.

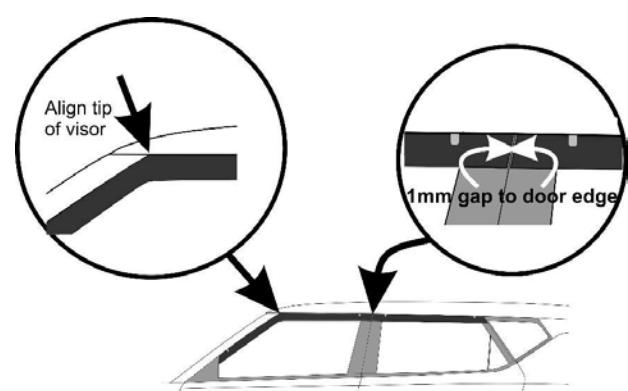


4 Set visors on door frames to familiarize yourself with where they mount.

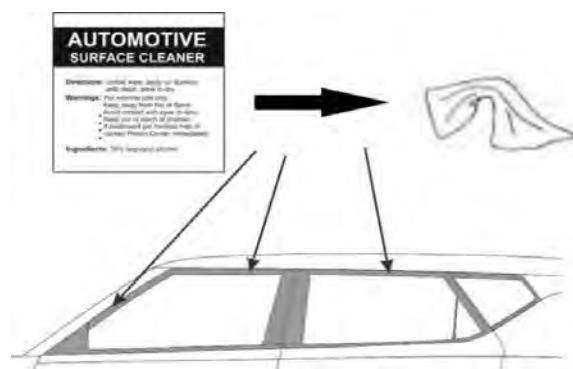

5 Thoroughly clean with surface cleaner and aggressively dry door frames with a soft cloth or paper towel.

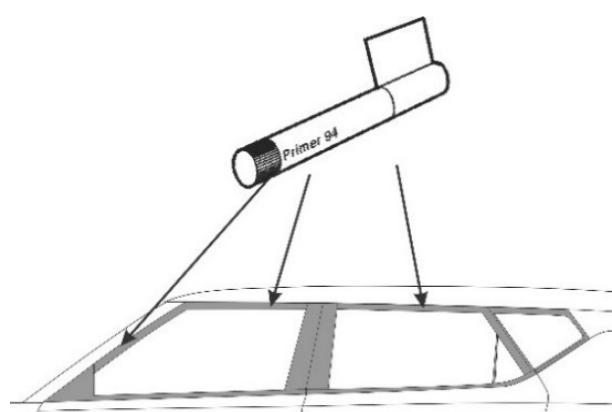

6 Following Primer 94 Instructions, prime all surfaces where the visors attach.

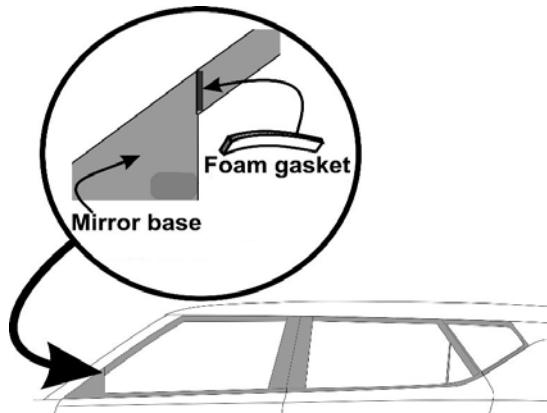


7 Install the foam Gasket as the illustration shows.


Make sure the clips are well seated on the door frame



8 Set visor in place and peel tape.

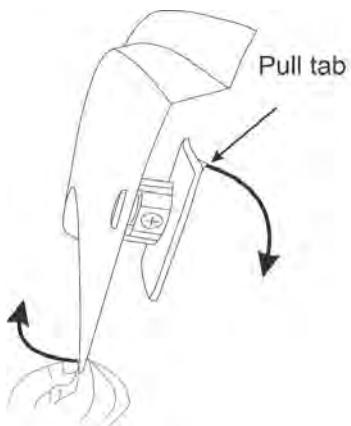

9 Gently lift visor away from door frame so the pull tab on the adhesive pedestal is accessible. Pull the red backing from the pedestal and firmly press the visor onto the door frame.

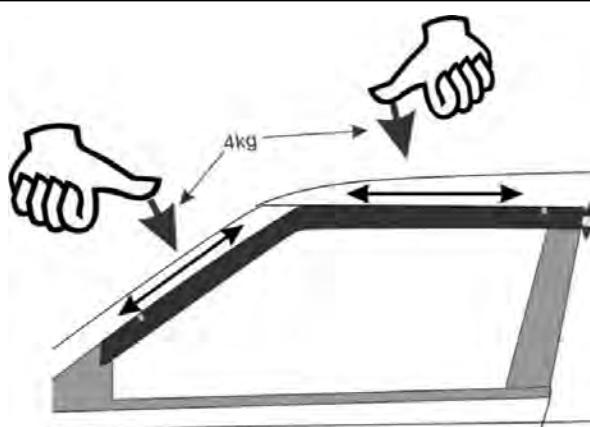

10 "Wet out" adhesive tape.




11 Using the wooden "wet-out" stick supplied, reach under the visor to apply pressure to the surface of the adhesive pedestal. This will make sure there is maximum contact between the adhesive tape and door frame.

1st




12 Repeat with rear visor.


# Passenger Side

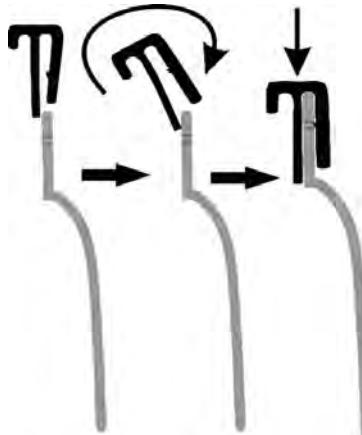


1 Using the method illustrated, snap two (2) clips on each visor. Note orientation of the clip.

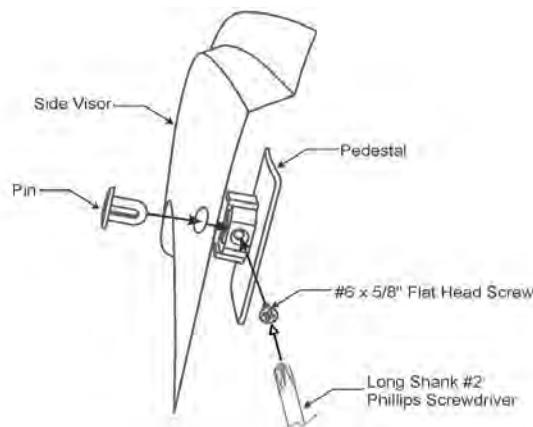


2 Insert a pin through the hole in the side visor and into the adhesive backed pedestal. Maintain slight pressure on the pin, to ensure proper seating of the components, while simultaneously tightening the screw.

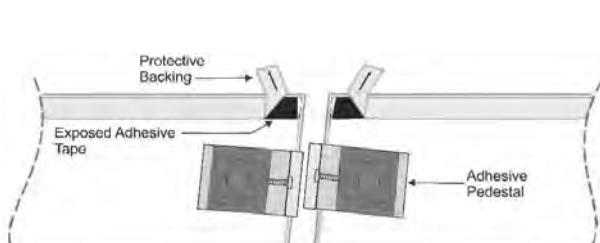


3 See illustration for pedestal orientation.

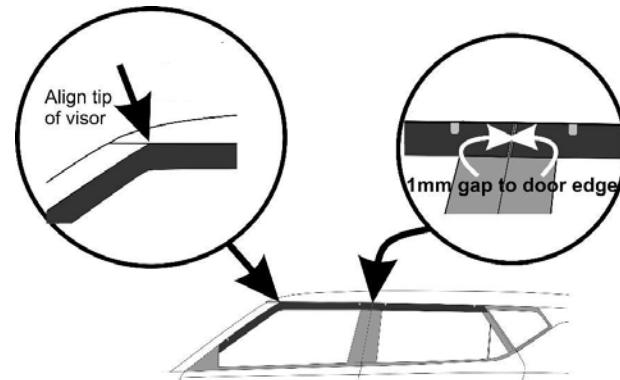


4 Set visors on door frames to familiarize yourself with where they mount.

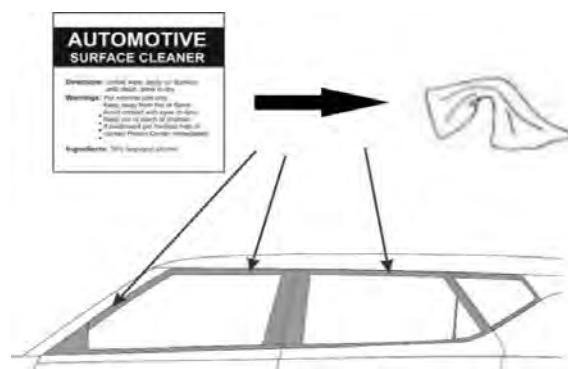

5 Thoroughly clean with surface cleaner and aggressively dry door frames with a soft cloth or paper towel.

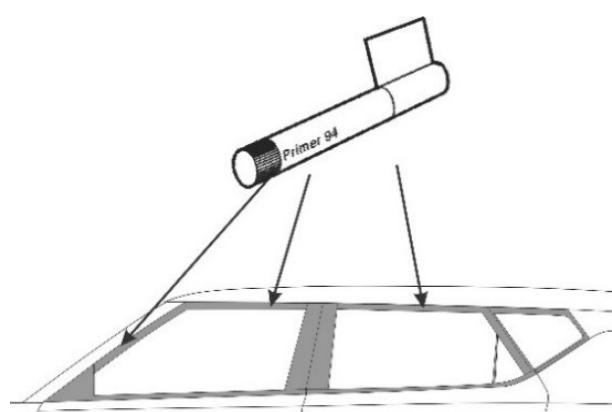

6 Following Primer 94 Instructions, prime all surfaces where the visors attach.

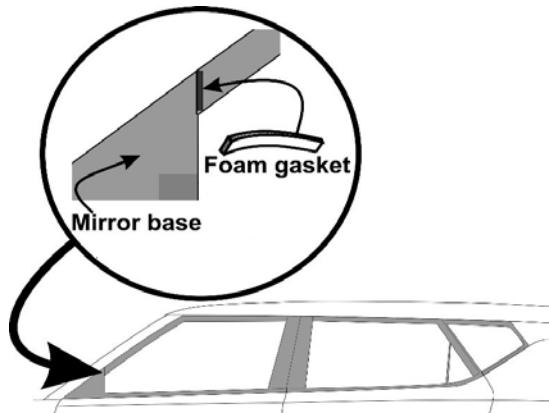


7 Install the foam Gasket as the illustration shows.

Make sure the clips are well seated on the door frame




8 Set visor in place and peel tape.

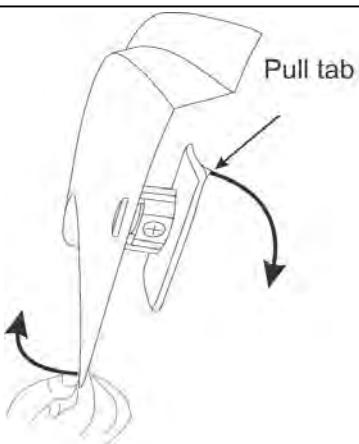

9 Gently lift visor away from door frame so the pull tab on the adhesive pedestal is accessible. Pull the red backing from the pedestal and firmly press the visor onto the door frame.

10 "Wet out" adhesive tape.

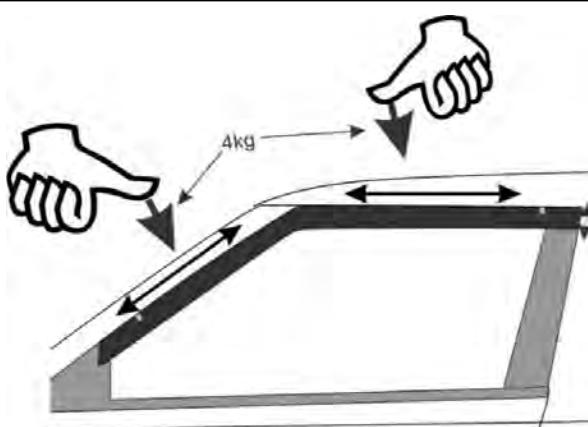

11 Using the wooden "wet-out" stick supplied, reach under the visor to apply pressure to the surface of the adhesive pedestal. This will make sure there is maximum contact between the adhesive tape and door frame.

1st



12 Repeat with rear visor.