

FORM FIT Hood Protector

Installation Instructions

HD 10H16
Hyundai Tucson (2016-2021)

HARDWARE KIT


- 6 – Bumpons
- 7 – Abrasion pads
- 7 – Mounting clips
- 7 – Pins
- 7 – Screws
- 7 – 'L' Brackets
- 1 – "D" gasket
- 1 – Automotive surface cleaner

TOOLS REQUIRED

- 1 – Phillips Screwdriver # 2
- 1 – Tape Measure

INSTALLATION INSTRUCTIONS

1. Ensure the hood is clean and dry inside and out.
2. Clean the area indicated in the illustration with the Automotive surface cleaner.
3. Center the "D" gasket laterally on the hood.
4. The "D" gasket installs approximately 1" up from the body line above the hood edge. Once its position has been established, peel a small length of the protective backing and place the gasket in position on the hood. **Do not peel the full length of backing off!** The adhesive is very sticky and once it sticks to something it is very difficult to remove. Peel 3 or 4 inches at a time and press down as you peel.

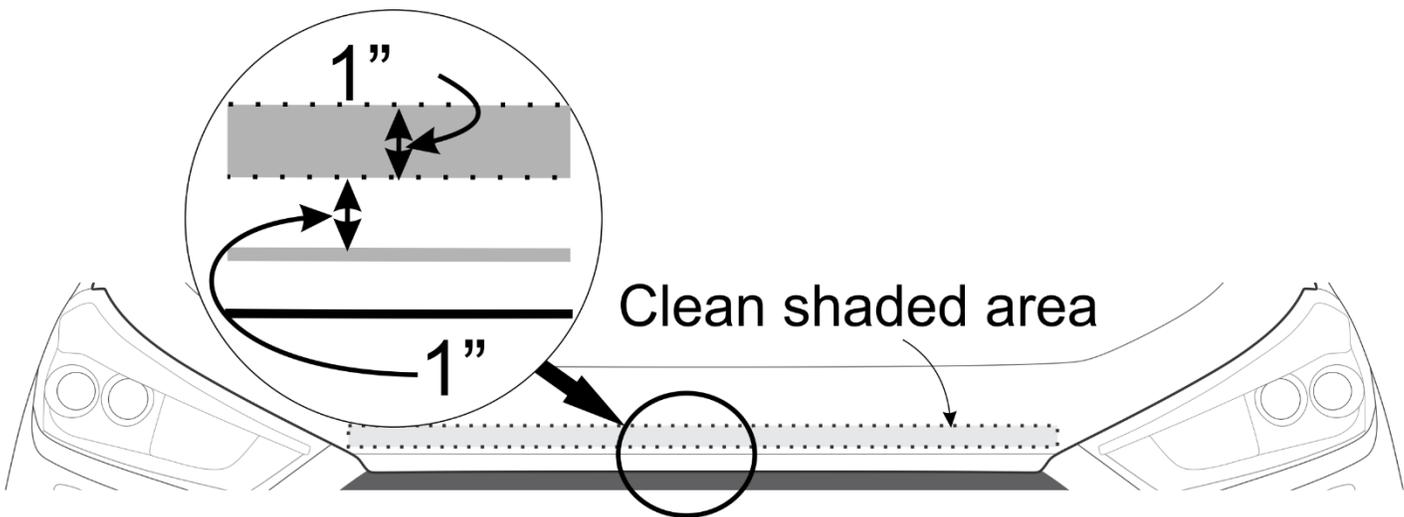

5. Install the bumpons on the hood as shown in *illustration #1*. Attention: If bumpons are installed on the protector they will wear through the paint.
6. Center the protector on the hood and rest it on the bumpons.
7. Peel and fold an anti-abrasion film pad in half over the hood edge under each of the (3) holes in the protector over the grill. **See illustration #2 – Step 6.**
8. a) Place a mounting clip over each of the anti-abrasion film pads. **See illustration #2 – Step 8.**
b) Insert a pin through the protector and into each of the clips. **See illustration #2 – Step 9.**
c) Insert a screw through an 'L'- bracket and into each of the clips. **See illustration #2 – Step 10.**
d) Make sure all the components are well seated together and that the protector is centered on the hood. Tighten the screws into the clips.
9. **Repeat steps 7 and 8 for the remaining (4) holes above the headlights.**

On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

ILLUSTRATION #1 - BUMPON LOCATION


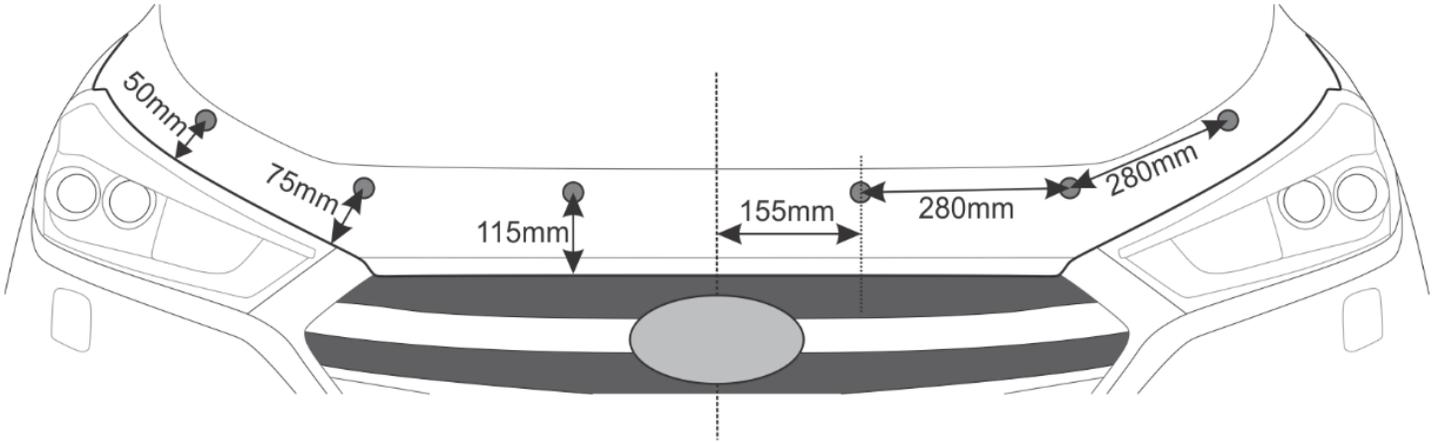


ILLUSTRATION #2 - CLIP CONFIGURATION

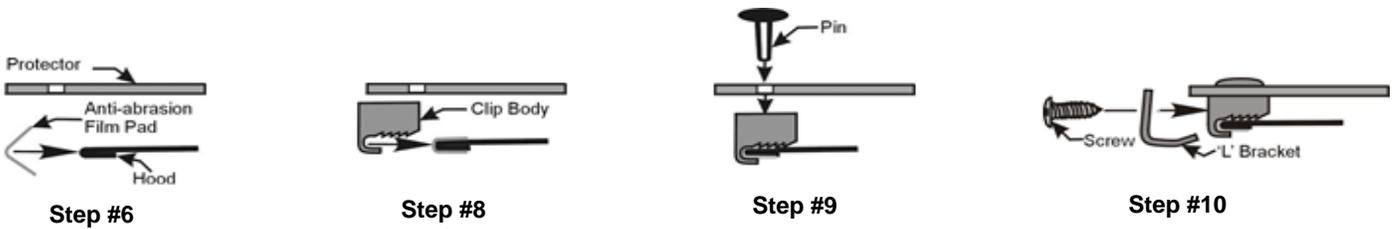

CARE INSTRUCTIONS

- Clean the protector with either a mild soap/water solution or utilize a plastic cleaner. Do not use chemicals or solvents.
- Periodically check to make sure the bump-ons are in place and that the protector is secure.
- Avoid using automatic car washes.
- Do not pull on the protector when opening or closing the hood.

Thank you for purchasing a **FORMFIT** hood protector. Retain this sheet for care instructions and kit information.