


# FORM FIT Hood Protector


Lexus GX 470 (2003 - 2009)

HD 24D03

## Hardware Kit




## Tools Required



## Installation Instructions


1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Clean the 2 (two) areas shown in *Illustration #1*, where the mounting pedestals will attach, with the alcohol pad. Wipe dry with a clean cloth or paper towel.
3. Peel the protective backing from the tape and with the open end of the pedestals facing forward, press the pedestals into place on the hood as shown in *Illustration #1*. Press down firmly on each mounting pedestal to make sure they are properly adhered.
4. Install the bumpons as shown in *Illustration #2*. **Attention: The bumpons must be installed on the hood not the protector!!!!** If the bumpons are installed on the protector, they will wear through the paint.
5. Position the protector on the hood by engaging the hooks on the pedestals attached to the protector with those on the pedestals installed on the hood. Make sure that the protector is centered.
6. Peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the lower two (2) holes in the protector. See *Illustrations #2 & #3 - Step 6*.
7. a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in *Illustration #2 - Step 7a*.  
b) Insert a pin through the protector into each of the clips. See *Illustration #2 - Step 7b*.  
c) Insert a #6 x 5/8" screw through an 'L'-bracket and into the clip. See *Illustration #2 - Step 7c & 7d*.  
d) Make sure all the components are well seated together; the protector is centered on the hood, and then tighten the screws into the clips.
8. Repeat steps #6 and #7 for the other six (6) holes. Place the remaining two anti-abrasion film pads on the bumper cover directly below the clips – See *Illustration #2*.
9. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.  
**Note: Do not pull on the protector when opening or closing the hood.**

Illustration # 1: Pedestal Location Placement

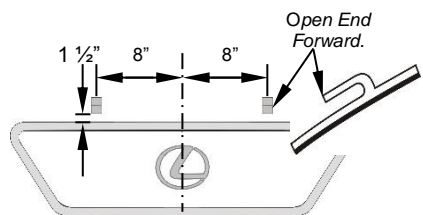


\*2 pedestals are already installed on the protector

Illustration # 2: Bumpon and Clips

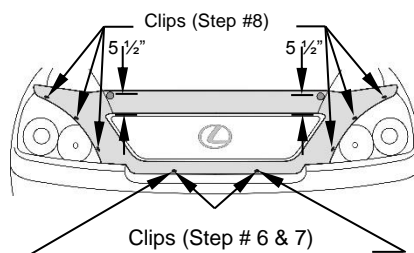

Anti-abrasion Film Pads mount on the bumper cover below the clips (Step #9)

Illustration # 3: Clip Configuration – Patent Pending

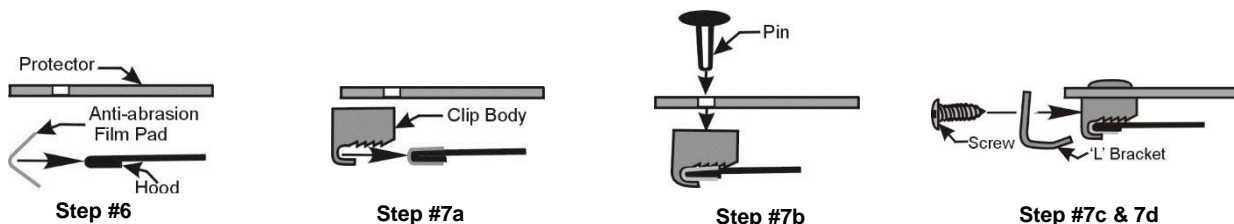

## Care Instructions

- Clean the protector with a mild soap and water solution or plastic cleaner only.
- Do not use chemicals or solvents. Avoid using automatic car washes.
- Periodically check to make sure all the hardware is in place and the protector is secure.

Thank you for purchasing a FORM FIT hood protector.