

HARDWARE KIT


2 – 3M Adhesive Promoters
1 – Alcohol Wiping Pads

TOOLS REQUIRED

None

Attention: This product uses a 3M adhesive product that requires installation and curing temperatures of at least 20°C/ 70°F for 24 hours to develop maximum adhesion to the surface. **Failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.**


1. The visors mount to the window frames of the vehicle. Be sure the mounting areas are clean and dry, at or above room temperature.
2. Test fit the visor to the door frame before attempting final installation. Open the front door and place a front visor into position by hooking the mounting clips (already attached to the visor) over the top edge of the door frame. See illustration.
3. Adjust the visor forward and back to evenly space the visor between the end of the door and the mirror base. Test fit the rear visor in the same manner, spacing it evenly on the door frame. Open and close the doors to ensure there is no interference with the visors. Remove the visors.

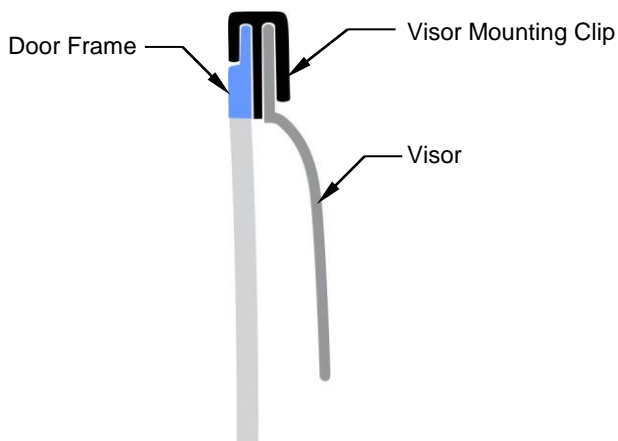

3M Primer 94 Instructions

- Squeeze tube in middle to break inner ampule
- Apply to clean, dry surface
- Allow at least 5 minutes to dry before taping

4. Clean the mounting area aggressively with alcohol wiping pad to remove any finger prints, oils or waxes that may be on the surface. Prime the contact area on the window frame with the adhesion promoter provided.
5. Starting at the back edge of the visor, peel the first 50mm (2 inches) of the protective backing from the tape on the horizontal flange of the visor. Peel the first 50mm (2 inches) of the protective backing from the vertical flange as well. Fold back the protective backing from the tape as shown in the illustration.

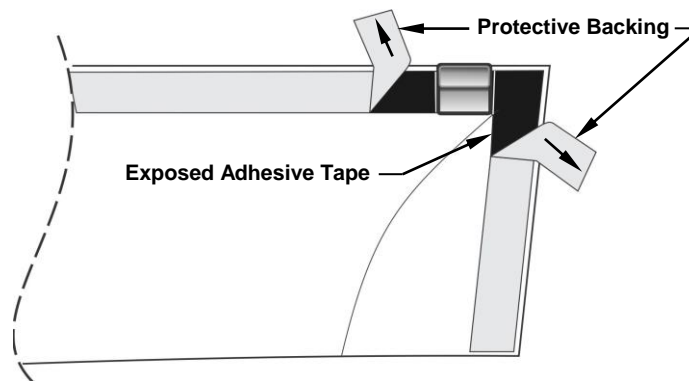

6. Reposition the visor on the window frame as described in steps #2 and #3. Adjust the visor for best fit. While pressing the visor into place, pull the protective backing out from between the visor and door frame without disturbing the fit of the visor.
7. Once the visor is in place, press down hard along the entire mounting flange to ensure that the tape is fully adhered to the vehicle.
8. Remove any residue of the adhesion promoter with the alcohol wiping pad.

CARE INSTRUCTIONS

Clean the deflectors with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the deflectors are secure. Avoid using automatic car washes.

Retain this sheet for care instructions and kit information.

MADE IN CANADA

Rev0.042722