
FORM FIT Side Window Visors
Installation Instructions

SD 22B23
Kia Sportage (2023-2026)

Attention


- **Make sure the vehicle is clean and completely dry before installation Be aware any debris, oils, paint or surface treatment can effect the pedestal adhesiveness to the vehicle surface. Adhesive failure due to this is not covered under warranty.**
- **This product uses a 3M adhesive that requires installation and curing temperatures of 15° to 43°C (60° to 110°F) for 1 hour to develop maximum adhesion to the vehicle surface. Failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.**
- **Please allow the tape to properly bond to your vehicle before washing the vehicle or driving at high speed. Allow 24 hours before washing or driving over 100 kmh.**

Contents

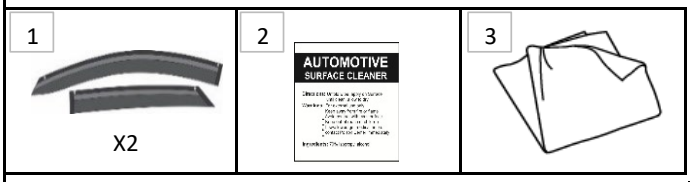

#	Qty	Description
1	1	Side window visors (set of 4)
2	2	Surface cleaner pad
3	2	Microfibre towel
4	4	Adhesive pedestals
5	4	Screws
6	4	Pins
7	1	Wet out stick

Tools Required

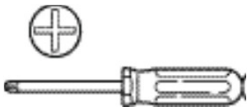


#2 Phillips Screwdriver with LONG SHANK


Care Instructions

- **Do not pull or push on the window visors when opening or closing the vehicle's doors.**
- **Regularly maintain and inspect the visors. Confirm the visors are securely attached to the vehicle.**
- **Check for missing hardware or detached tape. Missing components may lead to product failure.**
- **Avoid automatic car-wash equipment where brushes will come in contact with the visors, or high powered air is used to dry the vehicle. Soft-cloth or touchless style automatic carwashs are less likely to cause damage.**
- **Hand clean visors using a mild soap and water solution or plastic cleaner only.**


Installation Instructions

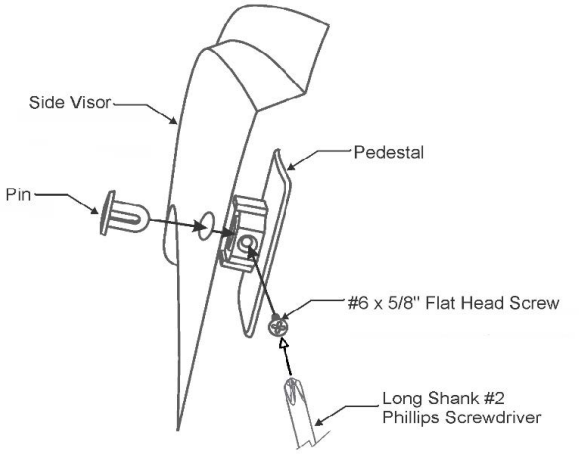


1 **Insert a pin through the hole in the side visor and into the adhesive backed pedestal. Maintain slight pressure on the pin, to ensure proper seating of the components, while simultaneously tightening the screw.**

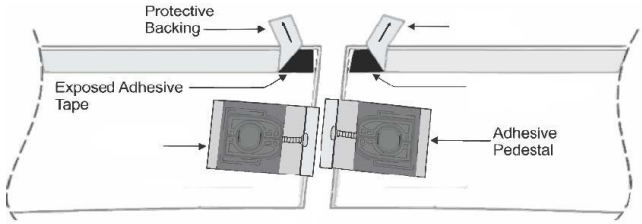


2 **See illustration for pedestal orientation.**

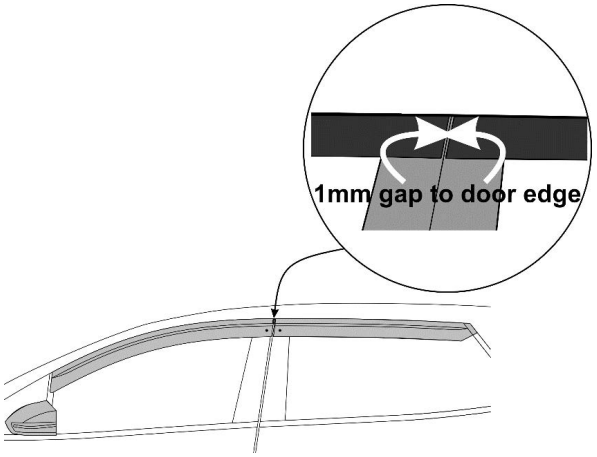


3 **Set visors on door frames to familiarize yourself with where they mount.**

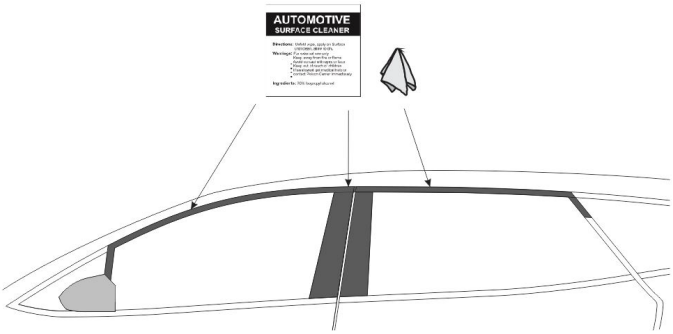


4 **Thoroughly clean with surface cleaner and aggressively dry door frames with a soft cloth or paper towel.**

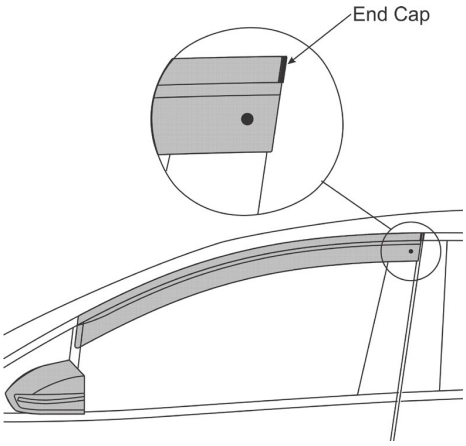


5 **Locate front side visor to the end cap.**

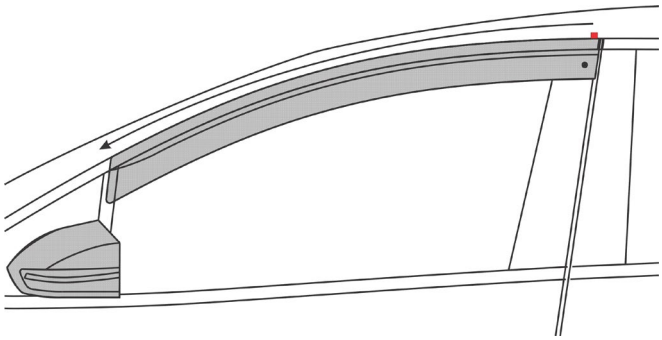


6 **Set visor in place and peel tape.**

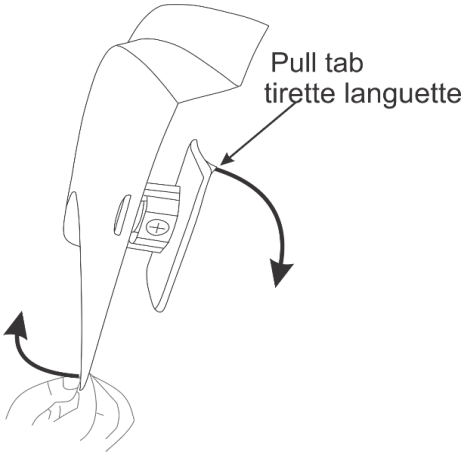


7	**Gently lift visor away from door frame so the pull tab on the adhesive pedestal is accessible. Pull the red backing from the pedestal and firmly press the visor onto the door frame.**

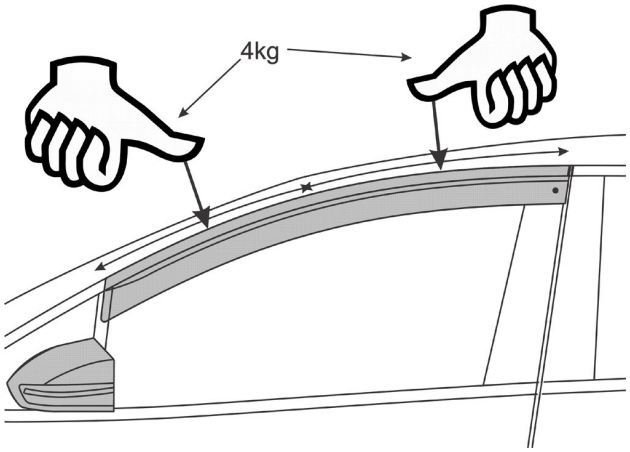


8	**"Wet out" adhesive tape.**

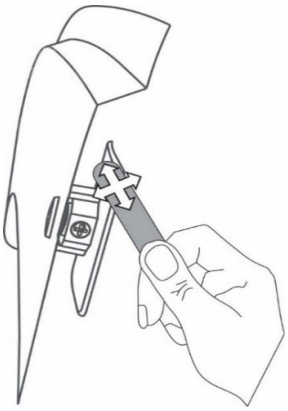


9	**Using the wooden “wet-out” stick supplied, reach under the visor to apply pressure to the surface of the adhesive pedestal. This will make sure there is maximum contact between the adhesive tape and door frame.**

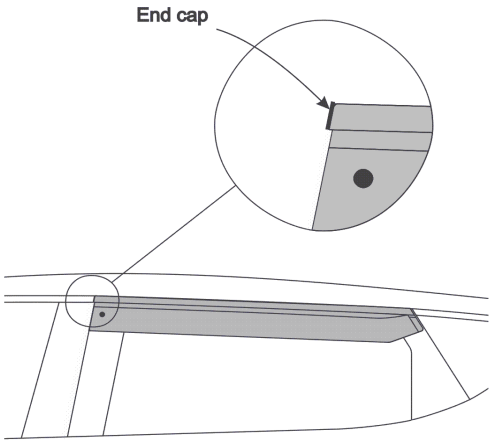

10	**Locate rear side visor to the end cap.**

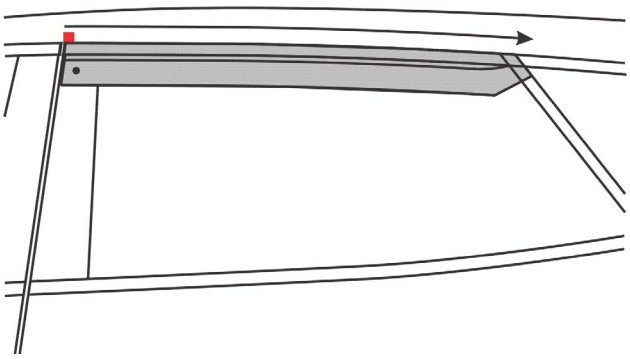

11	**Set visor in place and peel tape.**

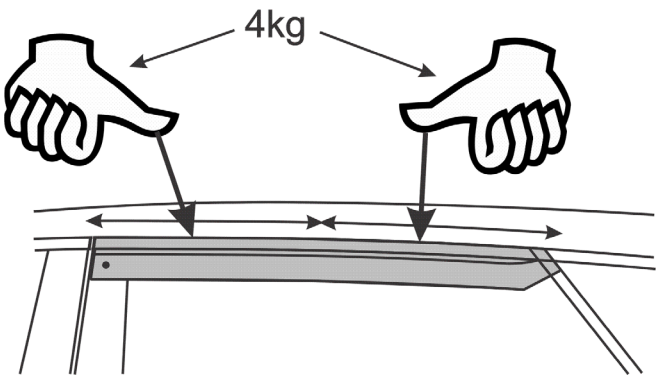

	"Wet out" adhesive tape.

Repeat for other side!