


# FORM FIT Hood Protector Installation Instructions

**HD 10E19**  
**Hyundai Elantra (2019-2021)**


## Installation


- Make sure the vehicle is clean and completely dry before installation.
- This product uses a 3M adhesive that requires installation and curing temperatures of 15° to 43°C (60° to 110°F) for 1 hour to develop maximum adhesion to the hood surface. Failure to install this product at the proper temperature or allow adequate curing time before use is not covered under warranty.
- Proper installation of the adhesive pedestal system requires the use of a #2 Phillips screwdriver, preferably with a long shaft. The shaft of the screwdriver needs to fit through the hole in the pedestal. Use of the correct screw driver will facilitate a trouble free installation. Do not attempt to use #1 or smaller Phillips screwdriver or any type of electric screwdriver.

## Basic Required Hand Tools

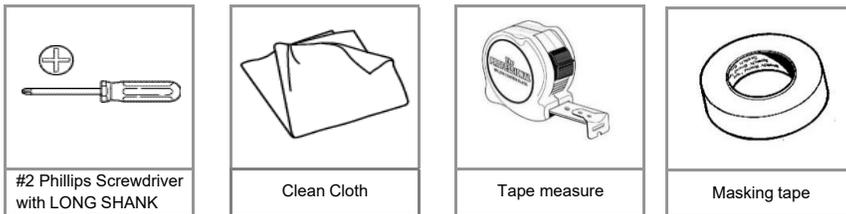


## Kit Contents

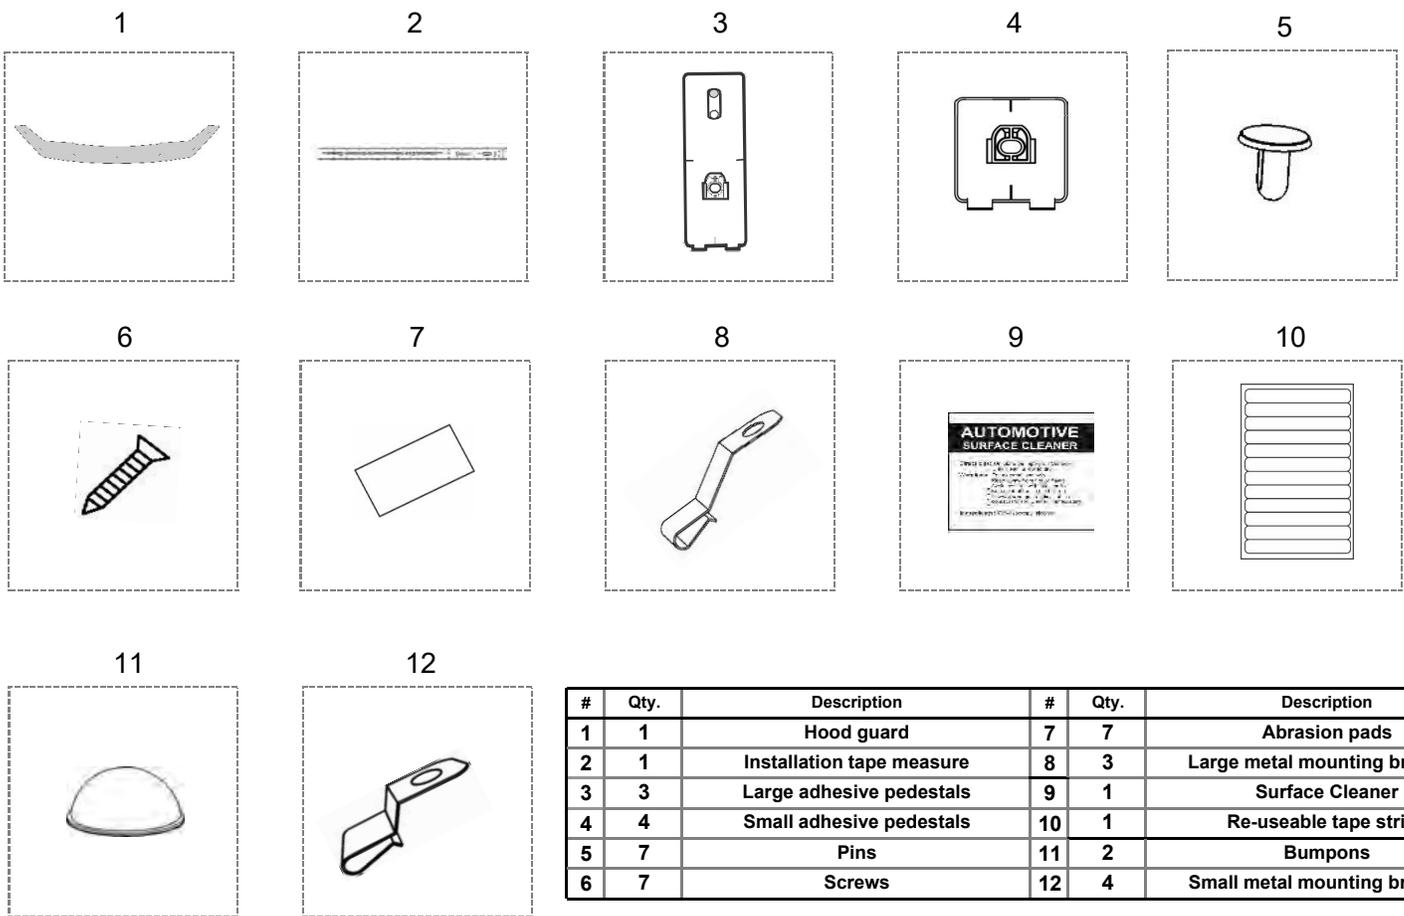

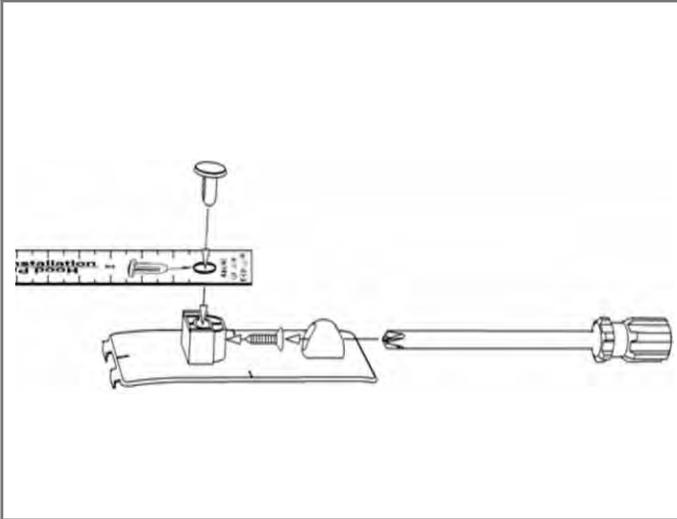

**Prepare tape measure** 1


**NOTE** Insert a pin through the hole in the hood protector installation tape measure supplied and into one of the large adhesive pedestals and install a screw into the pedestal

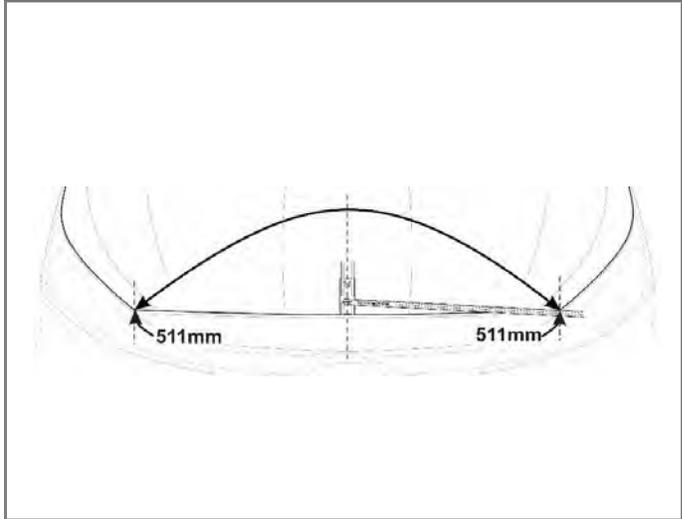

**Locate the center pedestal** 2

**NOTE** Use the installation tape measure to confirm the pedestal is centered by measuring to the two front corners of the hood. Move the pedestal left or right until it is perfectly centered. The measurement provided is an approximation and is provided as a starting position.


Proper positioning of the center pedestal is critical to ensuring proper positioning of the remaining hardware and the hood protector.

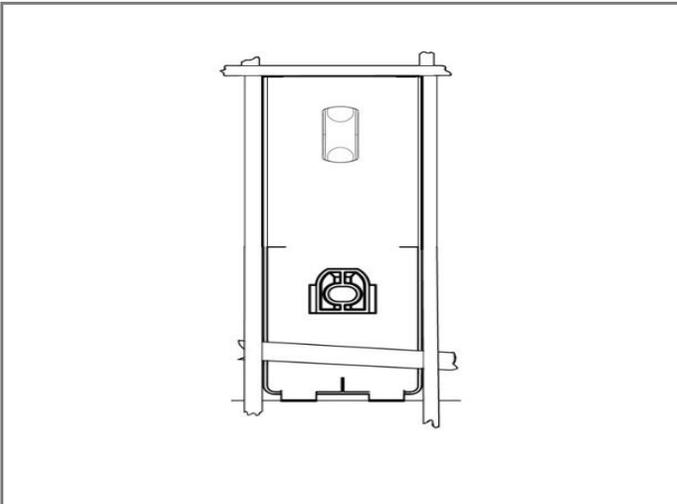

**Outline center pedestal** 3

**NOTE** Once the location of the center pedestal has been established, outline its position with the supplied tape strips or masking tape.


Proper marking and prepping of all pedestal locations is critical. Accurately installing them in the exact position is very important. Once attached, the pedestals are very difficult to remove - place them correctly the first time.

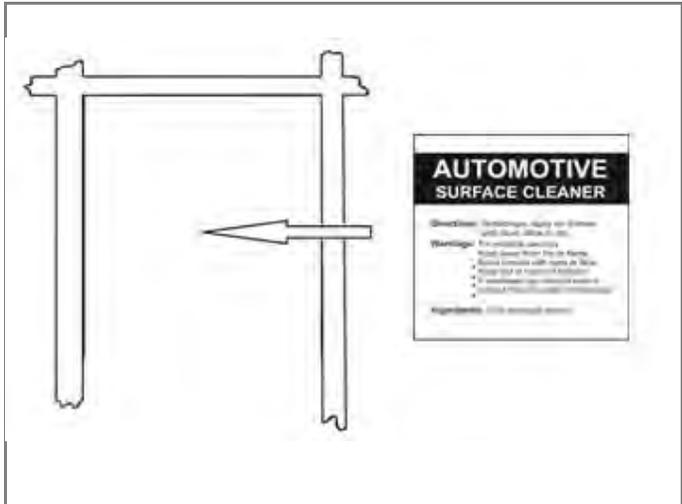

**Clean the surface** 4

**NOTE** Remove the pedestal and thoroughly clean the outlined area with the surface cleaner. Wipe dry with a clean cloth or paper towel. This will ensure all wax, finger prints and oils are removed from the hood surface in the bonding area.

Important! Proper preparation of the hood surface will ensure maximum adhesive bond.

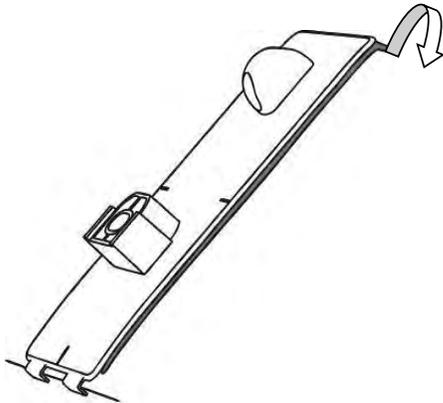


### Permanently attach pedestal 5

NOTE

Remove the red backing from the adhesive and install on the hood surface. Tip: Hook the fingers on the pedestal over the hood edge and rotate the unit into position. After installation, remove the tape strips and "wet out" the pedestal base by applying pressure with your thumb around the surface of the pedestals.



Important: "wetting out" of the pedestal will ensure maximum adhesive bond.

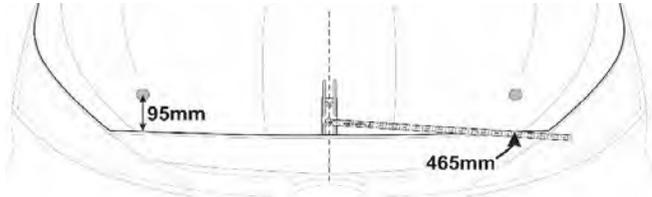


### Install Bumpons 6

NOTE

Using the measurements provided, install the (2) bumpons as illustrated.




Bumpons must be installed on hood. If they are installed on the hood protector they may wear through the paint on the hood.

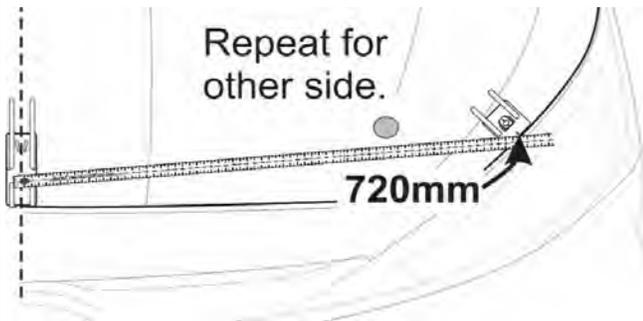

### Temporarily fit 1st small pedestal 7

NOTE


Dry fit the small pedestals using tape strips supplied or masking tape to temporarily hold them in position. The positions of the pedestals are shown in the illustrations. Use the center line on the leading edge of the pedestals for accurate measuring. See illustration.

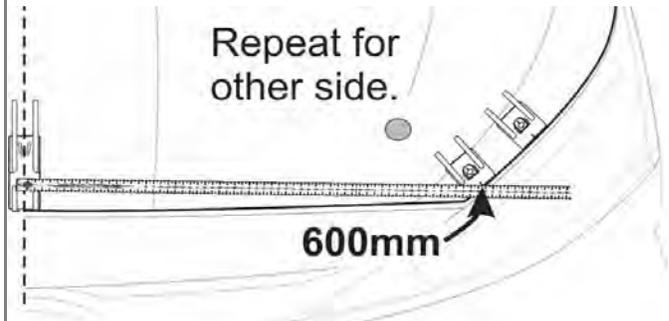

### Temporarily fit 2nd small pedestal 8


NOTE

Dry fit the small pedestals using tape strips supplied or masking tape to temporarily hold them in position. The positions of the pedestals are shown in the illustrations. Use the center line on the leading edge of the pedestals for accurate measuring. See illustration.

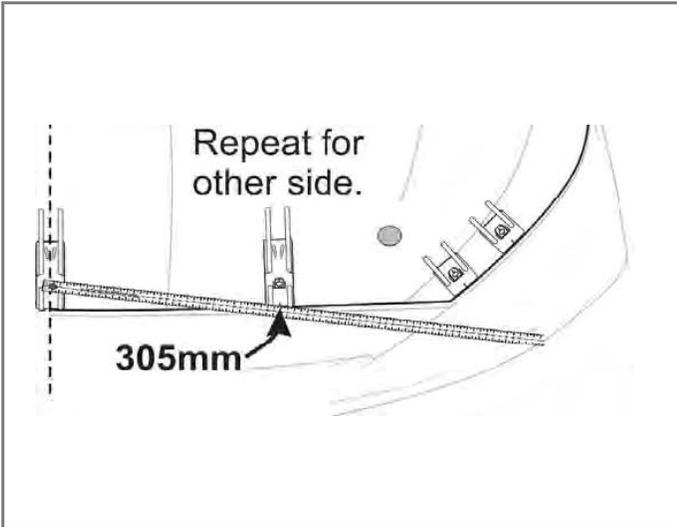


**Temporarily fit large pedestals** 9

**NOTE**  
 Dry fit the small pedestals using tape strips supplied or masking tape to temporarily hold them in position. The positions of the pedestals are shown in the illustrations. Use the center line on the leading edge of the pedestals for accurate measuring. See illustration.

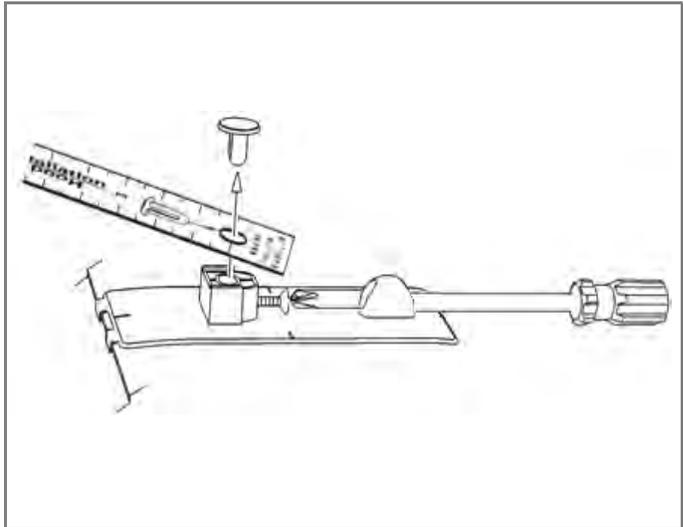

**Remove installation tape measure** 9a


**NOTE**  
 Remove the hood protector installation tape measure by loosening the screw and removing the pin.

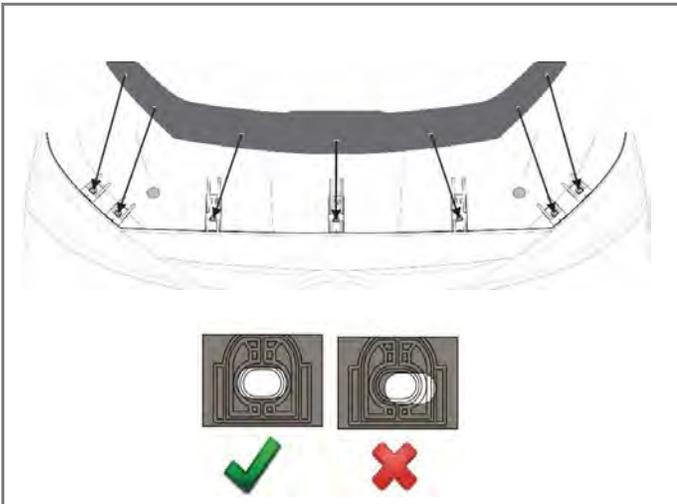

**Test fit hood protector** 10

**NOTE**


- Place the hood protector on the pedestals to confirm proper positioning.
- Ensure the holes in the protector align with those in the pedestals.
- If necessary, reposition the pedestals so all attachment positions are correct and the protector is well centered.

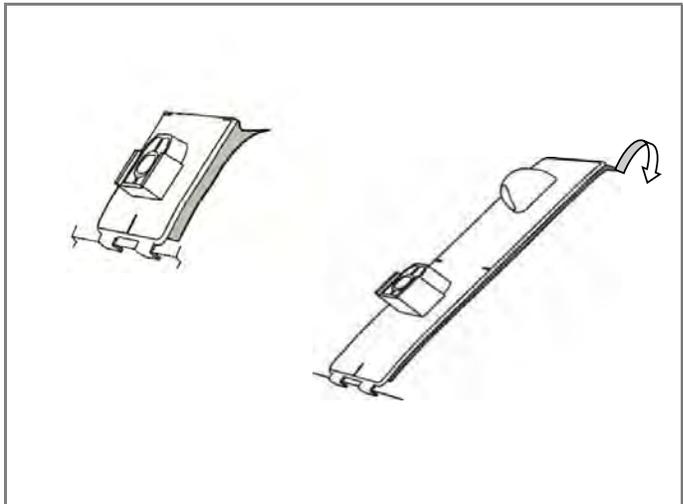

**Attach remaining pedestals** 11


**NOTE**  
 Once locations for the remaining pedestals have been established, repeat steps 3, 4 and 5 for those pedestals.

 Place all pedestals carefully as once they are stuck down, they are very difficult to remove.

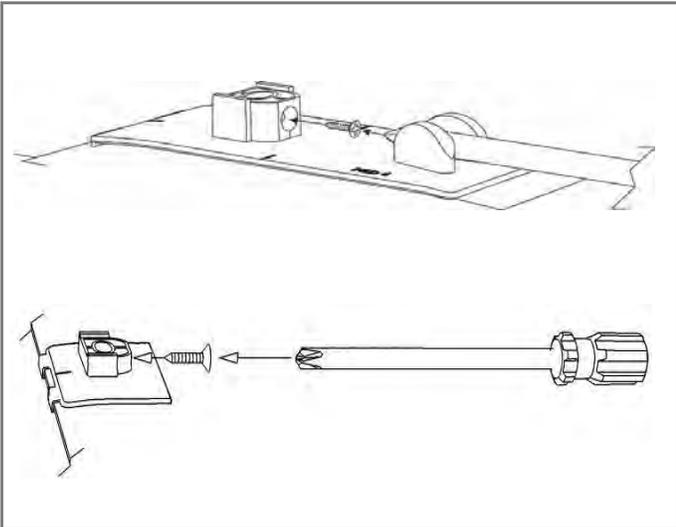


**Start screws** 12

**NOTE** Start a screw into each pedestal a few turns. The tip of the screw must not protrude into the hole where the attachment pin will install later.

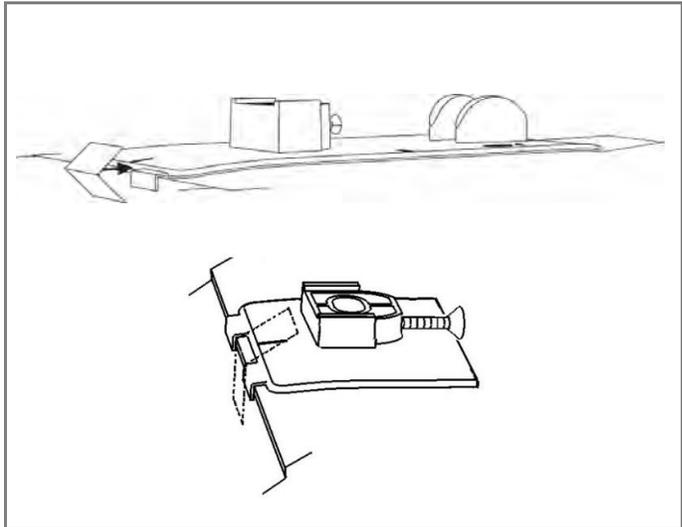


**Install anti-abrasion film** 13

**NOTE** Peel and fold the anti-abrasion film pads in half over the hood edge between the fingers on each of the mounting pedestals.

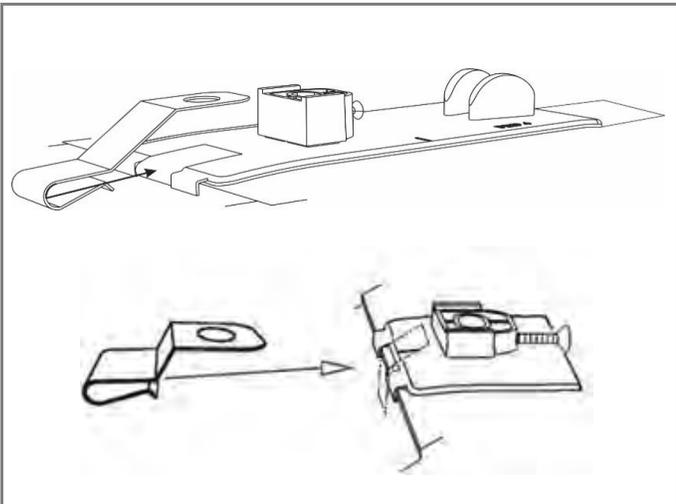


**Install metal brackets** 14

**NOTE** Push metal mounting brackets over the hood edge aligned with the anti-abrasion pads. Ensure the bracket is fully seated over the hood edge and the hole in the bracket is aligned with the hole in the pedestal.

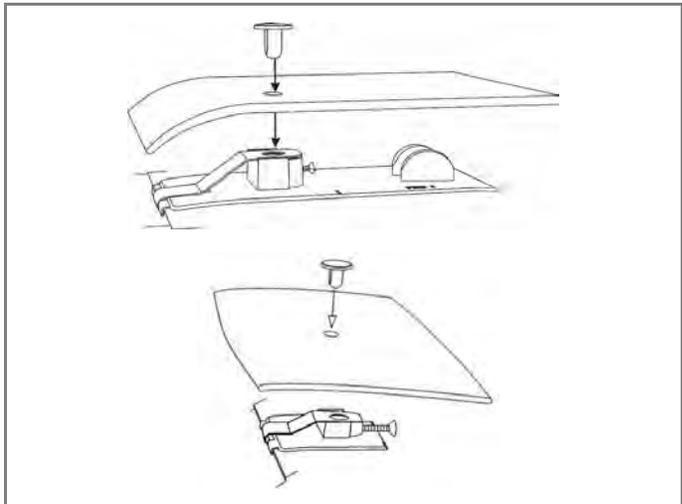


**Position protector, install pins** 15

**NOTE** Place the protector on the pedestals and starting at the center position, install a pin through the protector and into the pedestal.

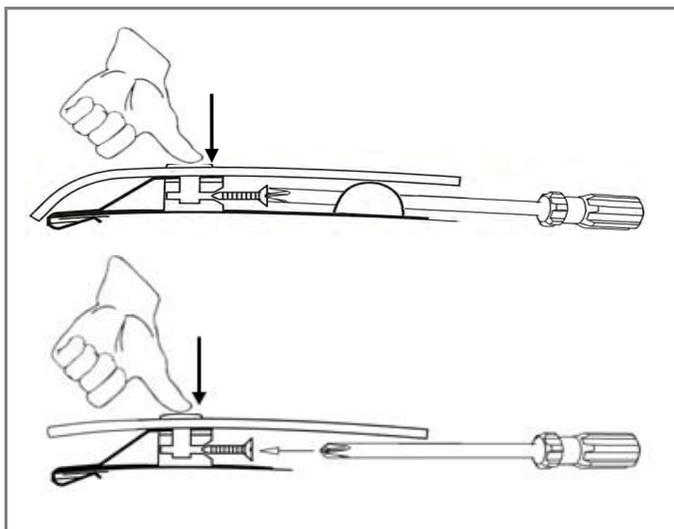

	<b>Partially tighten the screws</b>	<b>16</b>
<b>NOTE</b>	Maintain slight pressure on the pin to ensure proper seating of the components, while simultaneously tightening the screw a few turns. Repeat for remaining pedestal locations.	
	NOTE: Only tighten screws a few turns so the pins are held in place but there is still some movement of the protector as this assists in final alignment of all attachment positions.	

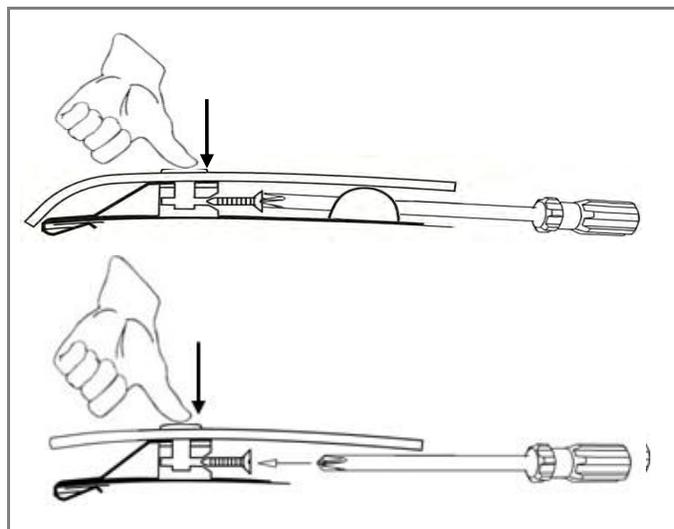

	<b>Finish tightening the screws</b>	<b>17</b>
<b>NOTE</b>	Confirm protector is centered on hood. Starting at the center location tighten all the screws that were loosely installed in step 16.	
	NOTE: To allow adhesive to cure, do not wash your vehicle for 24 hours.	

## **CARE**

- Hand clean the protector using a mild soap and water solution or plastic cleaner only.
- Avoid automatic car-wash equipment where brush and/or soft cloth come in contact with the hood protector. Touch-less style automatic car-wash is less likely to harm the hood protector.
- Periodically check to confirm the protector is securely attached to the hood.
- Do not pull/push on the protector when opening/closing the hood.
- On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.

Thank you for purchasing of a **FORMFIT** Hood Protector.

Please retain this sheet for care instructions and kit information. If you have any questions regarding our product, please contact us via email at **customer@focusauto.com** or visit our website at **www.formfithoodprotectors.com**.